



EGR Tube: Service and Repair

REMOVAL



1. Remove the idle air control valve.

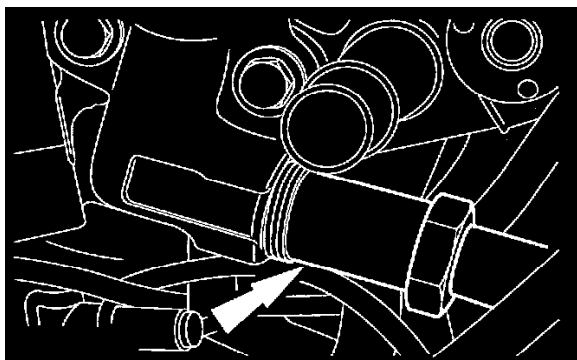

2. Disconnect the tube from the exhaust gas recirculation valve.
3. Raise and support the vehicle.
4. Remove the engine splash shield.

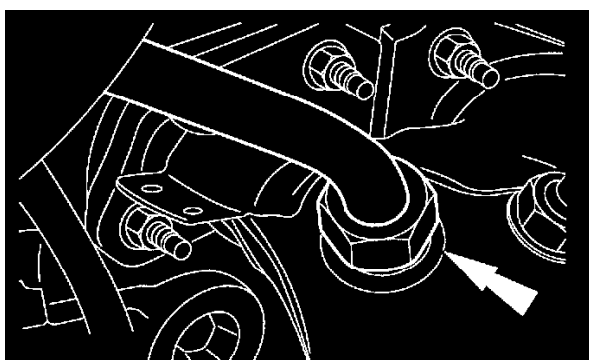

5. Disconnect the exhaust gas recirculation valve tube and remove it.

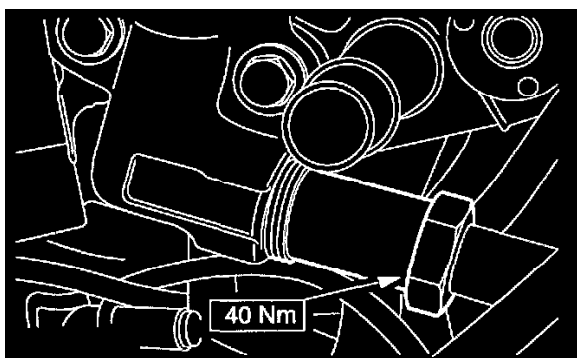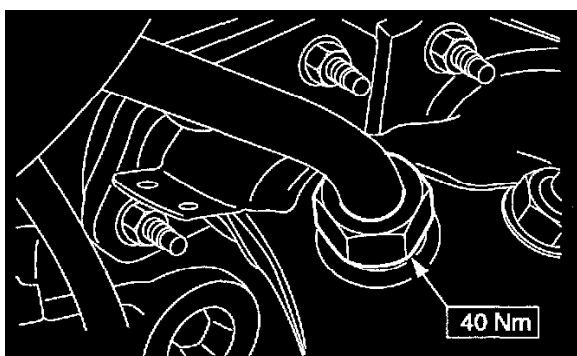

INSTALLATION

1. To install, reverse the removal procedure.